COUGAR

www.cougargaming.com

PURI
THE GAMER'S ULTIMATE WEAPON

REAL GEAR FOR REAL GAMERS | REAL GEAR FOR REAL GAMERS

FEATURES

ENGLISH

- **COMPACT AND STURDY DESIGN**
  Solid and stable, Puri's minimalist design brings you all the key features of a pro gaming keyboard without burdening you with extras you don't need. Quality and strength meet in this superb gaming tool.
- **CHERRY MX MECHANICAL SWITCHES**
  The original mechanical switches from Germany are also the best on the market. With 50 million clicks per switch of guaranteed flawless performance, Cherry switches bring you the response and reliability you want.
- **BACKLIGHT EFFECTS (20 PRESET + 10 CUSTOMIZABLE)**
  Simple and elegant, Puri's backlight functionality gives you all you need. Start enjoying 20 preset modes that cover the most commonly needed patterns (uniform, wave, breathing, etc.) and 10 modes for you to customize!
- **MAGNETIC PROTECTIVE COVER**
  No cloth or mesh pouches here: to truly protect your keyboard both at home and on the go, you need (and we are happy to give you!) a solid cover. Puri's magnetically attached cover will protect it from water spills, bread crumbs or pressure when traveling.

- **N-KEY ROLLOVER IN USB MODE**
  N-KEY directly in USB mode, without need for a USB to PS/2 adapter. Unlimited simultaneous key presses.
- **FUNCTION KEY SHORTCUTS**
  FN key combos allow you to quickly access multimedia functions and lock the WIN & application key.
- **1000 Hz POLLING RATE / 1 ms RESPONSE TIME**
- **DEDICATED MULTIMEDIA FUNCTION KEYS**
- **3-STEP HEIGHT AND ANGLE ADJUSTMENT**
- **CABLE MANAGEMENT SYSTEM**
- **BRAIDED CABLE & GOLDEN-PLATED CONNECTOR**
- **WINDOWS & APPLICATION KEY LOCK**
  Avoid kicking yourself out of games by locking the Windows key in-game with an easy shortcut.
- **DRIVER-FREE**
  Plug and Play. No need to bother installing or configuring anything, no driver conflicts, no updates. Just you and the game.

DEUTSCH
- SCHÜTZENDE ABDECKUNG MIT MAGNETHALTER
- ABNNEHMBARES KABEL
- 20 BELEUCHTUNGS-EFFEKTE
- CHERRY MECHANISCHE SWITCHES
- N-KEY ROLLOVER IM USB-BETRIEB
- RUTSCHFESTE GUMMI-FÜSSE

ESPAÑOL
- MAGNÉTICO TAPA PROTECTORA
- CABLE DETACHABLE
- 20 EFECTOS DE RETROILUMINACIÓN
- TECLADOS MECÁNICO CHERRY MX
- N-KEY ROLLOVER
- 1000 Hz POLLING RATE / 1MS RESPONSE TIME

PORTUGUÊS
- MAGNÉTICO CAPA PROTETORA
- CABO DESTACÁVEL
- 20 EFEITOS DE LUZ DE FUNDO
- TECLADOS MECÁNICOS CHERRY MX
- N-KEY ROLLOVER
- 1000 Hz POLLING RATE / 1MS RESPONSE TIME

РУССКИЙ
- МАГНИТНЫЕЗАЩИТНАЯ КРЫШКА
- СЪЕМНЫЙ КАБЕЛЬ
- 20 ЭФФЕКТ ПОДСВЕТКИ
- МЕХАНИЧЕСКИЕ КЛАВИШИ CHERRY MX
- N-KEY ROLLOVER
- 1000 Hz POLLING RATE / 1MS RESPONSE TIME

POLISH
- OSŁONA OCHRONNA
- ODŁĄCZANY KABEL
- 20 EFEKTÓW PODSWIETLENIA
- MECHANICZNE PRZEŁĄCZNIKI CHERRY MX
- N-KEY ROLLOVER W TRYBIE USB
- RAPORTOWANIE 1000Hz / CZAS REAKCJI 1MS

FRANÇAIS
- HOUSSE DE PROTECTION MAGNÉTIQUE
- CÂBLE DÉTACHABLE
- 20 EFFETS DE RÉTROÉCLAIRAGE
- SWITCHS MÉCANIQUES CHERRY MX
- N-KEY ROLLOVER
- TEMPS DE RÉPONSE 1MS/ FRÉQUENCE 1000Hz

HUNGARIAN
- MÁGNESES PROTEKTOR FEDÉL
- LEVEHETŐ KÁBEL
- 20 PROGRAMOZOTT FÉNYHATÁS
- CHERRY MX MECHANIKUS KAPCSOLÓK
- N-KARAKTÉRES PUFFER USB ÜZEMMÓDBAN (N-KEY ROLLOVER)
- 1000Hz-ES MINTAVÉTELEZÉS / 1MS-OS VÁLASZIDŐ

ITALIANO
- COPERTURA PROTETTIVA MAGNETICA
- CAVO STACCABILE
- 20 EFFETTI DI RETROILLUMINAZIONE
- CHERRY MX SWITCH MECCANICI
- N-KEY ROLLOVER IN MODALITA' USB
- 1000Hz POLLING RATE / 1MS RESPONSE TIME

日本語
- 磁気保護カバー
- 取り外し可能なケーブル
- 20パターンLEDバックライトモード
- CHERRY MXメカニカル・スイッチ使用
- Nキーロールオーバー対応
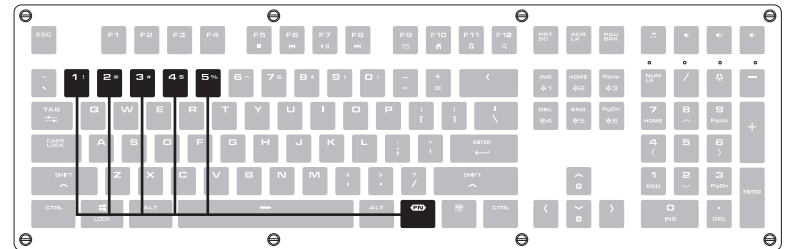- 1000Hzレポートレート/1MS応答速度

한국어
- 자기보호 커버
- 탈착식 케이블
- 20 가지 백라이트 효과
- CHERRY MX 기계식 키
- N-KEY ROLLOVER
- 1000 Hz POLLING RATE / 1MS 응답속도

中文
- 磁铁保护防尘盖
- 分离式线材
- 20种背光效果
- CHERRY MX 机械式开关
- N-KEY ROLLOVER / 100%无冲突按键
- 1000 Hz轮询速率 / 1MS响应时间

RESTORE THE DEFAULT SETTING
FN + **ESC**

KEY SHORTCUTS
FN + ■ / |◄◄ / ►/|| / ►►| / ✉ / ⌂ / ▦ / ⌕

BACKLIGHT EFFECTS (20 PRESET + 10 CUSTOMIZABLE)
FN + ☼ 1~6

- **LOCK WIN KEY & APPLICATION KEY**
  FN + **LOCK**
- **FN KEY**
  FN
- **FULL KEY BACKLIGHT**
  BRIGHTNESS ADJUSTMENT
  FN + ▣/▣
- **BACKLIGHT EFFECTS SPEED**
  FN + −/+
- **LOGO BACKLIGHT**
  On/Breathing/Off
  FN + **L**
- **BACKLIGHT EFFECTS DIRECTION**
  FN + ‹ / ›

• Depends on diverse languages and regions, the keyboard layout will be different.

DEFAULT GAMING BACKLIGHT SETTINGS

Backlight 1 : Press the Fn key + 1
Backlight 2 : Press the Fn key + 2
Backlight 3 : Press the Fn key + 3
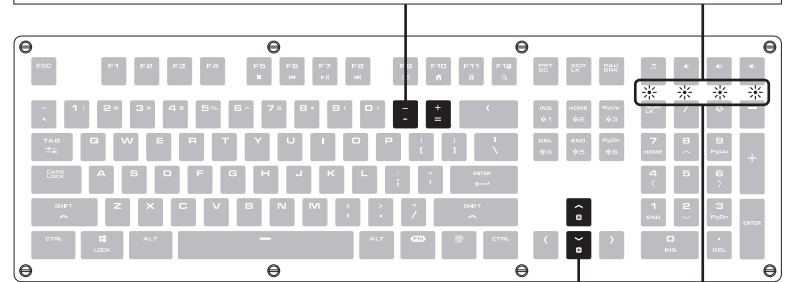Backlight 4 : Press the Fn key + 4
Backlight 5 : Press the Fn key + 5

FN + **1** / **2** / **3** / **4** / **5**

BACKLIGHT EFFECTS SPEED
FN + −/+
☼1 ☼A ☼⊥ ☼L

• When the speed reaches its maximum or minimum, the NUM Lock, CAPS Lock, Scroll Lock and Windows Key lock will start blinking.

BRIGHTNESS ADJUSTMENT
FN + ‹ / ›
☼1 ☼A ☼⊥ ☼L

• When the brightness reaches its maximum or minimum, the NUM Lock, CAPS Lock, Scroll Lock and Windows Key lock will start blinking.
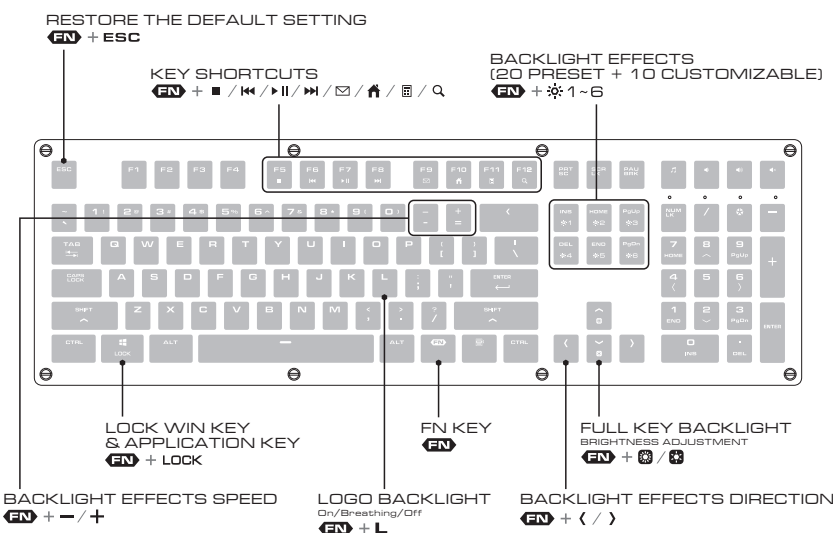
PACKAGE CONTAINS

| COUGAR PURI Gaming Keyboard |
| User Manual |

SYSTEM REQUIREMENTS

Windows 7, Windows 8, Windows 10
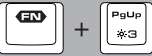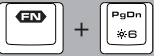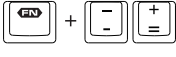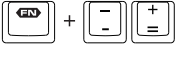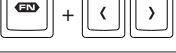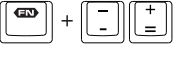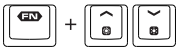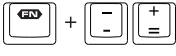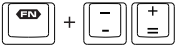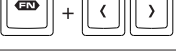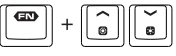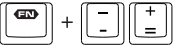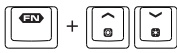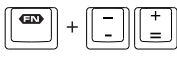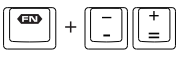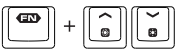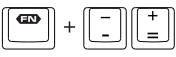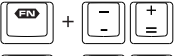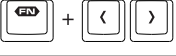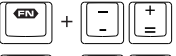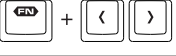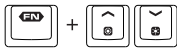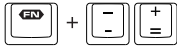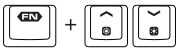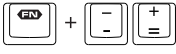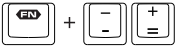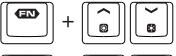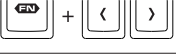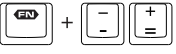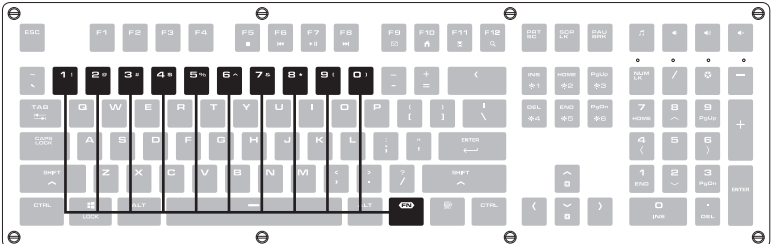
SPECIFICATIONS

Product name	PURI Gaming Keyboard	Interface	USB plug
Key switch	Cherry MX mechanical switch	Cable length	1.8m
N-key rollover	Yes (USB mode support)	Dimension	150(L) X 460(W) X 40(H) mm
Polling rate	1000Hz	Material	Steel / Plastic
Full key backlight	Yes	Weight	1.4kg

The above specifications may vary by country or region

20 BACKLIGHT EFFECTS

☼1	☼2	☼3	☼4	☼6
FN + **INS ☼1**	**FN** + **HOME ☼2**	**FN** + **PgUp ☼3**	**FN** + **DEL ☼4**	**FN** + **PgDn ☼6**
Press the Fn key + INS key to change different backlight effects.	Press the Fn key + HOME key to change different backlight effects.	Press the Fn key + PgUp key to change different backlight effects.	Press the Fn key + DEL key to change different backlight effects.	Press the Fn key + PgDn key to change different backlight effects.

1 STEADY
FN + ⌄ ⌃ Brightness adjustment

1 RIPPLE
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed

1 SNAKE
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed

1 WAVE
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed
FN + ⟨ ⟩ Backlight effects direction

1 STAR
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed

2 GRADIENT
FN + ⌄ ⌃ Brightness adjustment

2 REACTIVE
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed

2 RHYTHM
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed

2 CIRCLE
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed
FN + ⟨ ⟩ Backlight effects direction

2 STAR-2
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed

3 BREATHING
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed

3 ARROW
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed

3 RAIN
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed

3 WAVE-2
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed
FN + ⟨ ⟩ Backlight effects direction

3 WAVE-4
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed
FN + ⟨ ⟩ Backlight effects direction

4 VANISH
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed

4 AREA
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed

4 RIPPLE-2
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed

4 WAVE-3
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed
FN + ⟨ ⟩ Backlight effects direction

4 FLOW
FN + ⌄ ⌃ Brightness adjustment
FN + − + Backlight effects speed

☼5

CUSTOMIZE BACKLIGHT EFFECTS: KEY BY KEY

There are 10 custom lighting effects in total.

Step 1 : Press the Fn key + 1~0

Step 2 : Press the Fn key + END key   **FN** + **END ☼5**

Step 3 : Press the key you want to light up.
Then, you can continue to set other keys.
When you finish all settings, press the Fn key + END key again to store it.

RESTORE THE DEFAULT SETTING   **FN** + **ESC**